

User manual **EN**



**2.0**

**8 On-Off**

**10 - 12 DC Inverter**

**12 DC Inverter ELEC**

*We would first of all like to thank you for having chosen one of our products.*

*We are sure you will be happy with it because it represents the state of the art in the technology of home air conditioning.*

*By following the suggestions contained in this manual, the product you have purchased will operate without problems, giving you optimum room temperatures with minimum energy costs.*

*Innova S.r.l*

This booklet, code N273027D - Rev. 02 - (06/18) consists of 20 pages.

## Compliance

This unit complies with the following European Directives:

- Low voltage 2014/35/EU
- Electro-magnetic compatibility 2014/30/EU
- Use restrictions of hazardous substances in electrical and electronic equipment 2011/65/EC (RoHS2)
- Waste electrical and electronic equipment 2012/19/EC (WEEE).
- Energy consumption indication on the labels of energy-related products 2010/30/EU
- ErP Directive 2009/125/EC and regulation 2012/20EC

## Symbols



The pictograms in the next chapter provide the necessary information for correct, safe use of the appliance in a rapid,

unmistakable way.

## Editorial pictograms

- |   |   |
|---|---|
| <b>U</b> User   | <b>S</b> Service  |
| - Refers to pages containing instructions or information for the user.      | - Refers to pages containing instructions or information for the CUSTOMER TECHNICAL ASSISTANCE SERVICE installer. |
| <b>I</b> Installer  |   |
| - Refers to pages containing instructions or information for the installer. |   |

## Safety pictograms

- |   |   |
|---|---|
|  Warning |  Prohibition |
| - It indicates actions that require caution and a suitable preparation.                     | - Refers to prohibited actions.   |

## General table of contents

EN

### 1 User manual

1.1	Warnings . . . . .	4
1.2	Management of the appliance with the touch-screen display and remote control . . . . .	4
1.3	Description of operations . . . . .	5
1.4	Setting cool only or heat only modes . . . . .	8
1.5	Brightness regulation . . . . .	8
1.6	Touch-screen display key lock . . . . .	8
1.7	Hotel function . . . . .	8
1.8	Heating operating (only for ELEC model) . . . . .	8
1.9	Suggestions for power saving . . . . .	9
1.10	Diagnosis of problems . . . . .	9
1.11	Technical specifications . . . . .	11
1.12	Periodic Maintenance . . . . .	12

### 2 INNOVA App operation

2.1	Minimum system requirements . . . . .	13
2.2	Installing and using the APP . . . . .	13

## USER MANUAL



















### 1.1 Warnings

- ⚠ Objects or structural obstacles (furniture, curtains, plants, leaves, blinds, etc.) must not obstruct the normal air flow both from the internal and from the external grids.
- ⚠ It is strictly forbidden to place any containers on top of the appliance, especially if they contain liquid. This could trigger a short-circuit, damage the appliance and/or expose the user to the risk of electrocution.
- ⚠ Do not lean against, or worse sit on, the body of the conditioner, this would damage the appliance.
- ⚠ Do not move the horizontal air outlet flap manually. Always use the remote control to perform such operation.
- ⚠ In the event of water leaks, turn off the appliance and disconnect the electric power supply. Call the nearest service centre.
- ⚠ During heating mode, the conditioner eliminates periodically any ice formed on the external battery. In such situation, the machine keeps on working, but it does not dispense warm air to the room. This phase can last from 3 up to maximum 10 minutes.
- ⚠ The appliance must not be installed in rooms where explosive gases develop or where there are humidity and temperature conditions that exceed the maximum levels reported on the installation manual.
- ⚠ Clean the air filter regularly as described in the specific paragraph.

### 1.2 Managing the appliance with the touch-screen display and the remote control

- 1 Corresponding button on remote control
- 2 Corresponding button on touch-screen display


BUTTON / DISPLAY:

 Setpoint	 Heating only button (2)
 Up button	 Nocturnal well-being button
 Down button	 Control of air flow direction button
 On/off button	 Fan speed control button
 Well-being button (economic automatic mode)	 Timer mode setting button (1)
 Cooling only mode button	 Timer mode setting button (2)
 Dehumidification only mode button	 Brightness sensor
 Ventilation only mode button	 Digital thermometer; 1÷7 red bars in winter, blue bars in summer
 Heating only button (1)	 Not used



Normally, the display shows the operating status (see paragraph entitled Description of operations), as well as any alarms (see paragraph entitled Display alarms).

In addition, it is possible to select the various functions by pressing the symbols.

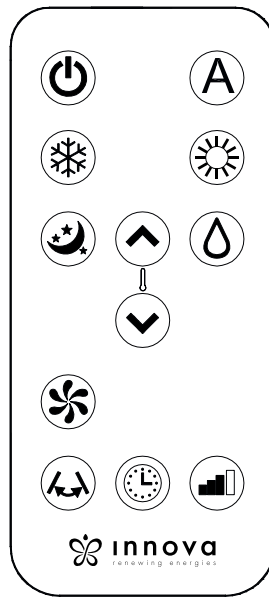

It is possible to select the various modes by pressing the buttons (see paragraph entitled Description of operations).

**⚠** The remote control provided has been designed to be functional and hard-wearing, however, it must be handled cautiously.

Avoid:

- leaving it exposed to rain, pouring liquids on it or dropping it into water
- hitting it or dropping it on hard surfaces
- leaving it under the sun

- placing obstacles between the remote and the appliance while using it.

In addition:

- if there are other appliances using remote controls in the room (TV, radios, stereos, etc.), interferences may occur
- electronic or fluorescent lamps can interfere with communication between the remote and the appliance
- remove the battery if not using the remote for a long time.

### Battery insertion

Only CR2012 3V dry lithium batteries must be used (supplied). Used batteries must be handed over to the specific collection areas as arranged by the Local Authorities for this type of waste.

In order to insert the batteries, open the specific cover

in the bottom part of the remote. The battery must be inserted respecting polarity. Once the battery is inserted, close the cover.

## 1.3 Description of operations














### General start-up and management








In order to manage the appliance using the remote control and the touch-screen, the main switch on the electrical power supply line must be turned on (its exact position can be indicated by the technician who installed the appliance) or the power supply plug must be connected to the system socket.

Once such operations have been performed, it is possible to manage the system by holding down the symbols on the

touch-screen (for 3 seconds) or by using the remote control. In order to send commands to the internal unit, the top part of the remote must point towards the display of the internal unit. The reception of the command is confirmed by a beep and by the display. The maximum distance for the remote control to work is approximately 8 metres.

Key/Display	Operation
<b>⚠</b>	The keys of the remote control and of the touch screen display perform the same functions.
<b>88.8</b>	When the unit is turned on, the 3 digits on the display will show the set-point.
<b>⬆</b>	<ul style="list-style-type: none"> <li>It is possible to set the set-point between 16 and 31°C, to which temperature the unit will bring the room.</li> </ul>
<b>⬇</b>	<b>⚠</b> If the temperature is set too low or too high, not only it is unhealthy, but it is also an unnecessary waste of energy.

Key/Display	Operation
	<b>Switching the appliance on and off</b> <p>It is possible to switch the appliance on or off (stand-by) by pressing the specific button. The control system of the appliance is equipped with a memory, so settings will not be lost if the appliance is switched off or in the power supply is cut. This key is used to activate or deactivate the appliance for short periods of time.</p> <p> In case of long periods of inactivity, the appliance must be deactivated by disconnecting either the main switch or the plug from the socket.</p>
	<b>Well-being button (economic automatic mode)</b> <p>By choosing this mode on the appliance, it sets the best level of comfort in the room. The conditioner selects the mode automatically (cooling or heating) according to the temperature set and ventilation speed according to the temperature of the room.</p>
	<b>Cooling only mode</b> <ul style="list-style-type: none"> <li>In this mode, the appliance dehumidifies and cools the room.</li> </ul>
	<ul style="list-style-type: none"> <li>It is possible to set the desired temperature between 16 and 31°C and, if this temperature is lower than the room temperature, the compressor starts up after three minutes (maximum) and the appliance starts dispensing cool air, maintaining ventilation active even if the setpoint has been reached.</li> </ul>
	<b>Dehumidification only mode</b> <p>In this mode, the appliance dehumidifies the room. Selecting this mode is useful during mid-seasons, i.e. on days (e.g. rainy ones) when the temperature is pleasant, but excess humidity causes discomfort. This mode ignores both room temperature and ventilation speed settings. The latter is always set to a minimum. It is normal for the appliance to work intermittently.</p>
	<b>Ventilation only mode</b> <p>By selecting this function, the compressor is never activated and the appliance does not affect either room temperature or humidity. IT IS possible to choose the speed of the fan</p>
	<b>Heating only mode</b> <ul style="list-style-type: none"> <li>In this mode, the appliance heats the room.</li> </ul> <p> Set on heating only mode, the appliance periodically defrosts the evaporator coil, if necessary. During this phase, the conditioner does not dispense warm air, even if its internal components are on, except for the room fan.</p>
	<ul style="list-style-type: none"> <li>It is possible to set the desired temperature between 16 and 31°C and, if such temperature is higher than the room temperature, the compressor starts up after three minutes (maximum) and the appliance starts dispensing warm air.</li> </ul>
	<b>Nocturnal well-being button</b> <p>While the appliance is on in the selected cooling or heating mode, it is possible to choose different functions by pressing the button in order to maximise noise reduction, energy saving and nocturnal well-being regulation. In this mode, ventilation is set on minimum speed. This mode should be activated right before going to sleep.</p> <ul style="list-style-type: none"> <li>In cooling mode, the set temperature is increased by 1°C after one hour and by another degree after two. After the second hour, the temperature is no longer changed and, after six hours, the appliance is put in stand-by.</li> <li>In heating mode, the set temperature is lowered by 1°C after one hour and by another degree after two. After the second hour, the temperature is no longer changed and, after six hours, the appliance is put in stand-by.</li> </ul> <p>This function is not available for dehumidification only, ventilation only and economic automatic modes and can be excluded any time (ideally once awake) by pressing the button again. If the Timer has also been set, the appliance will turn off at the set time.</p>
	<b>Control of air flow direction</b> <p>By pressing the specific button, it is possible to either select the continuous oscillation of the mobile air outlet flap - in such case, the symbol on the display is lit - or to block it in any position.</p> <p> <b>IMPORTANT:</b> The mobile flap must never be moved manually. In cooling and dehumidification modes, the position of the flap is reset every 30 minutes to prevent dew from forming.</p>

Key/Display	Operation
	<b>Fan speed control (models 8 and 10)</b> <p>By pressing this button several times, the speed will change according to the following sequence: Minimum, Medium, Maximum and Automatic.</p> <p>The higher the speed is set, the better the appliance will perform, but it will be less quiet. By selecting Automatic mode (shown by three speed bars moving up and down on the display), the on-board microprocessor automatically adjusts the speed, so that it stays higher the greater the difference between the temperature detected and the temperature set. The speed will always be automatically decreased as the room temperature approaches the set temperature. This is not possible in humidification only or nocturnal well-being mode where the appliance can only operate at a low speed.</p>
	<b>Setting power for models inverter 10HP and 12HP</b> <p>By pressing this key sequentially, it is possible to set the power supplied by the appliance on 5 adjustments: Minimum, Medium, Maximum, Dual Power and Automatic.</p> <p>The higher the power is set, the better the appliance will perform, but it will be less quiet.</p> <p>The Dual Power function (shown by three flashing speed bars on the display and the seven red or blue bars moving up and down of the digital thermometer), available only in heating and cooling mode, supplies a 30-minute Overboost. Then, the controller inhibits the function and switches to automatic mode.</p> <p>By selecting Automatic mode (shown by three speed bars moving up and down on the display), the on-board microprocessor automatically adjusts the speed, so that it stays higher the greater the difference between the temperature detected and the temperature set. This is not possible in humidification only or nocturnal well-being mode where the appliance can only operate at a low speed.</p>
	<b>Setting the Timer function</b> <ul style="list-style-type: none"> <li>The appliance allows the user to program when to turn it on and off, as required.</li> </ul>
	<ul style="list-style-type: none"> <li>While the conditioner is running, it is possible to schedule when it turns off by pressing the Timer button, followed by the number of hours (from 1 to 24), after which the unit will be put in stand-by.</li> <li>When the air conditioning unit is off, it is possible to schedule when it turns on by pressing the Timer button, followed by the number of hours (from 1 to 24) after which the unit will start.</li> </ul>
	
	<ul style="list-style-type: none"> <li>Then, press the confirm button.</li> </ul>
	<b>Touch-screen display key lock</b> <ul style="list-style-type: none"> <li>The key lock is activated by keeping the Timer symbol on the touch-screen display pressed for three seconds. The user cannot perform any actions. The stand-by symbol flashes every second.</li> <li>To deactivate the lock, keep the Timer symbol on the touch screen pressed for three seconds once again.</li> </ul> <p> The lock remains active in the case of a power failure and also if the remote control is used!</p>

## 1.4 Setting cool only or heat only modes

It is possible to deactivate the heating or the cooling modes following a simple procedure.

Keep the A key on the touch-screen display pressed for 5 seconds until HC (heating and cooling) appears on the display.

Press the A key for 1 second to switch to the CO (cooling


only) mode.

Press the A key again to switch back to HO (heating only) mode.

Wait for 3 seconds without touching anything to memorise the setting and return to normal operations.

## 1.5 Brightness regulation

The display brightness sensor can be disabled (leaving the maximum brightness at all times) by pressing and holding

the night button (  ) for 10 seconds. "ds" (disabled) or "En" (enabled) will appear on the display.

## 1.6 Touch-screen display key lock

The key lock is activated by keeping the Timer  symbol on the touch-screen display pressed for three seconds.


The user cannot perform any actions.

The stand-by symbol flashes every second.

To deactivate the lock, keep the Timer symbol on the touch screen pressed for three seconds once again.

The lock remains active also for the next operations performed via remote control and in the event of a power failure.


## 1.7 Hotel function

Press and hold the air exchange key (  ) for 10 seconds to enable the function ("En" displayed); the dehumidification and Auto functions are disabled (leaving active only

ventilation, heating and cooling) and the settable set range is reduced from 22 to 28 in cooling mode and from 16 to 24 in heating mode).

## 1.8 Heating operation (only for ELEC model)

The 12HP DC inverter ELEC has an additional electric element which provides heat when the weather conditions outside are bad. The heat power of the resistor is equal to 1,000W, so when the device software switches the 2.0 unit on, it will provide the combined thermal power produced by the heat pump and the thermal power of the electric element.

If you need to operate the appliance in quiet mode, it can be activated with "element only", without the compressor, simply by setting the night-time mode by pressing the button .

In this case, the element comes on if:

- the 2.0 unit is working with the heat pump (heating mode);
- the room temperature (measured by the internal probe) is one degree less than the configured setpoint;
- the room temperature is  $\leq 27^{\circ}\text{C}$ ;
- there are no alarms or failures related to the ventilation, room temperature probe and temperature coil.

The ventilation speed in this mode is fixed at 900 rpm.

If night-time operation is not selected, the element will switch on, together with the compressor, if:

- the 2.0 unit is working with the heat pump (heating mode);
- the room temperature is  $\leq 24^{\circ}\text{C}$ ;
- the room temperature is  $2^{\circ}\text{C}$  lower than the setpoint;
- the internal coil temperature is  $\leq 44^{\circ}\text{C}$ ;
- the ventilation is switched on and stable;
- there are no alarms or failures related to the ventilation, room temperature probe and temperature coil.

In normal operation, with the heating switched on, the element will deactivate if:

- the coil temperature of the internal exchanger is  $\leq 47^{\circ}\text{C}$ ;
- the room temperature is greater than the setpoint;
- the room temperature is at  $25^{\circ}\text{C}$ ;
- the ventilation stops or the fan is faulty;
- the compressor discharge temperature increases abnormally;
- the compressor operating frequency increases abnormally;

**N.B.** For the ELEC versions with resistor, disconnecting voltage from the device abruptly is prohibited in order to prevent internal overheating! Use the CP contact that places the device in standby and guarantees correct post-ventilation.

Also, remember never to cover the intake grille and output vent in any way whatsoever!




## 1.9 Suggestions for power saving

- Always keep the filters clean (see maintenance and cleaning chapter).
- Keep the doors and windows of the rooms to be air conditioned closed  
Do not let direct sunlight to enter the room (use curtains or lower the blinds or close the shutters)
- Do not block the air flow paths (input and output) of the unit; this, as well as causing a non-optimal performance of the unit, will jeopardise the correct operation of the same and may cause irreparable damage to the units.

## 1.10 Diagnosis of problems

For the User it is very important to distinguish any inconveniences or abnormal operation of the unit compared to its normal operation. Also, the most common problems can be easily solved by means of simple operations performed by the User (See paragraph: Troubleshooting), while for some alarms signalled on the

display, it is necessary to contact Customer Service.

 We also remind you that any attempt to repair the unit on part of unauthorised technicians will void the warranty immediately.

### Operating aspects that should not be interpreted as problems

- The compressor will not restart before a certain time has passed (about three minutes from the previous stop). It is not possible to stop and restart the compressor without waiting at least three minutes. This is provided for in the operating logic of the unit, so as to protect the compressor from frequent activations.
- During operation in heating mode, the warm air is delivered a few minutes after the activation of the compressor. If the fan started at the same time as the compressor, in the first minutes of operation the air delivered would be too cold (which may disturb the occupants of the room) since the unit is not yet ready.

### Open CP contact

If the presence contact is not closed, the appliance will not start and the **CP** alarm appears on the display.

### Evacuation of condensate water in the event of an emergency

Should any anomaly occur in the condensation water system, the maximum level float blocks the conditioner and the **OF** code appears on the display.

During cooling and dehumidification, electronics keeps the water distribution system active with the battery - together with the fan - to disperse excess water in the container. If the problem persists, please contact the assistance

service.

During heating, condensation should drain freely through the specific pipe. In the event of an alarm, check that the condensation pipe is not bent or obstructed, thus preventing the water from flowing out.

### Using the unit if the remote control is not available

If the remote control has been lost, the batteries are exhausted or it no longer works, the unit can be operated by using the keys on the touch screen display on the machine.

## Troubleshooting

In the even of a malfunction, please refer to the following table. If, after performing the suggested checks, the problem is not solved, please contact the authorised technical assistance.

Fault	Possible causes	Solution
The appliance doesn't switch on	No power supply	Check there is power supply (by turning a light on, for example). Check that the thermal-magnetic circuit breaker used exclusively to protect the appliance has not been tripped (if it has, reset it). If the problem repeats immediately, please call the Service Centre and avoid trying to make the appliance work.
	Remote control batteries have run out	Check that the appliance can be turned on using the touch-screen display and substitute the batteries.
The appliance does not cool/heat adequately.	The temperature set is too high or too low.	Check and adjust the temperature, if necessary.
	The air filter is clogged	Check the air filter and clean it if necessary
	Check that there are no other obstacles to the air flow both inside and outside.	Remove anything that might block the air flow.
	The heating and cooling load has increased (for example, a door or a window has been left open or an appliance has been installed in the room which generates a lot of heat).	Try to reduce the heating and cooling load of the room following instructions below: <ul style="list-style-type: none"> <li>• Cover large windows exposed to sunlight with curtains or with external maskings (blinds, porches, reflecting films, etc.);</li> <li>• The air conditioned room must remain closed for as long as possible;</li> <li>• Avoid turning on halogen lamps or other high energy consumption appliances such as small ovens, steam irons, hot plates etc.).</li> </ul>

## Display alarms

An alarm code appears on the display in the event of faults. Some of the functions, however, remain active (see FUNCTIONING column).

Alarm	Cause	Operation
<b>E1</b>	Faulty room temperature RT sensor	It is still possible to activate Cooling, Dehumidification and Heating modes. It only monitors the antifreeze function of the internal coil.
<b>E2</b>	Faulty internal coil IPT sensor	It is still possible to activate Cooling, Dehumidification and Heating modes.
<b>E3</b>	Faulty outside temperature OT sensor	It is still possible to activate Cooling, Dehumidification and Heating modes.
<b>E4</b>	Faulty external coil OPT sensor	It is still possible to activate Cooling, Dehumidification and Heating modes. Defrosting is performed at fixed times.
<b>E5</b>	Faulty internal fan motor	None of the modes can be activated.
<b>E6</b>	Faulty external fan motor	None of the modes can be activated.
<b>E7</b>	Lack of communication with the display *	None of the modes can be activated.
<b>E8</b>	Compressor discharge probe failure	None of the modes can be activated.
<b>CP</b>	Open CP contact	The appliance only works if the contact is closed. Check that the clamps are connected.
<b>OF</b>	Maximum level float intervention	During cooling and dehumidification, electronics switches the compressor off and keeps the water distribution system active with the battery - together with the fan - to disperse excess water. During heating, condensation should drain freely through the specific pipe. In the event of an alarm, check that the condensation pipe is not bent or obstructed, thus preventing the water from flowing out.


\* for models 10 and 12 HP DC Inverter: lack of communication between the main, power, driver or display boards

The only way to solve the problem is to disconnect and reconnect the appliance. If the alarm still appears, please contact the authorised technical assistance.

## 1.11 Technical specifications

Please read data plate to obtain the technical data listed below.

- Serial number to enter in the App
- Power supply voltage
- Maximum absorbed power
- Maximum absorbed current
- Amount of refrigerant gas
- Casing protection level

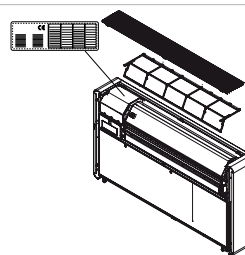

	U.M.	8 HP	10 HP DC Inverter	12 HP DC Inverter	12 HP ELEC DC Inverter
<b>Technical specifications</b>					
Cooling power (1)	kW	1,65	2,04	2,35	2,35
Power in max cooling mod. Dual Power	kW	-	2,64	3,10	3,10
Power in min cooling mod. Dual Power	kW	-	0,83	0,92	0,92
Heating power (2)	kW	1,70	2,10	2,36	2,36
Heating power (3)	kW	0,79	0,98	1,11	1,11
Additional power electrical resistance	kW	-	-	-	1,00
Power in max heating mod. Dual Power	kW	-	2,64	3,05	3,05
Power in min heating mod. Dual Power	kW	-	0,71	0,79	0,79
Power absorbed when cooling (1)	W	580	630	730	730
Power absorbed when heating (2)	W	545	638	720	720
Dehumidification capacity	L/h	0,7	0,8	0,9	0,9
Power supply voltage	V-F-Hz	230-1-50	230-1-50	230-1-50	230-1-50
EER	W/W	2,84	3,24	3,22	3,22
COP	W/W	3,12	3,29	3,28	3,28
Energy efficiency class when cooling		A	A+	A+	A+
Energy efficiency class when heating		A	A	A	A
Internal-external ventilation speed	No.	3	3	3	3
Internal/external air flow at max speed	m³/h	360/430	380/460	400/480	400 (8)
Internal/external air flow at medium speed	m³/h	300/360	310/380	320/390	320 (8)
Internal/external air flow at min speed	m³/h	240/320	260/330	270/340	270 (8)
Dimensions (WxHxD)	mm	1010X549X165	1010X549X165	1010X549X165	1010X549X165
Weight including packaging	kg	47,6	48,5	48,5	49,5
Sound pressure level (min-max) (4)	dB(A)	38/29	39/26	41/27	41/27
Unit sound power level inside (min-max) (5)	dB(A)	44/57	44/57	45/58	45/58
Wall holes diameter	mm	162	162	162	162
Wall holes distance	mm	293	293	293	293
Refrigerant gas		R410A	R410A	R410A	R410A

\* with Dual Power function activated during heating

### Reference conditions

		Room T	External T
(1)	Cooling mode tests (EN 14511)	DB 27°C - WB 19°C	DB 35°C - WB 24°C
(2)	Heating mode tests (EN 14511)	DB 20°C - WB 15°C	DB 7°C - WB 6°C
(3)	Heating mode tests	DB 20°C - WB 15°C	DB -7°C - WB -8°C
(4)	Internal side sound pressure measured in semi-anechoic chamber at a distance of 2 m.		
(5)	Internal side sound pressure measured in accordance with regulation EN 12012		

### Operating limits

	Internal ambient temp.	External ambient temp.
Maximum operating temperature in cooling mode	DB 35°C - WB 24°C	DB 43°C - WB 32°C
Minimum operating temperature in cooling mode	DB 18°C	DB -5°C
Maximum operating temperatures in heating mode	DB 27°C	DB 24°C - WB 18°C
Minimum operating temperatures in heating mode	DB 5°C	DB -10°C

## 1.12 Periodic Maintenance

The air conditioner you have bought has been designed to keep maintenance operations to a minimum, in fact, they


only include the following cleaning operations:

### External cleaning

- ⚠ Disconnect the unit from the power supply before each cleaning and maintenance intervention by setting the main power supply switch to off.
- ⚠ Wait for the components to cool down in order to avoid any burns.

- ⚠ Do not use abrasive sponges or abrasive or corrosive detergents as you might damage the painted surfaces.

When necessary, clean the external surfaces with a soft damp cloth.

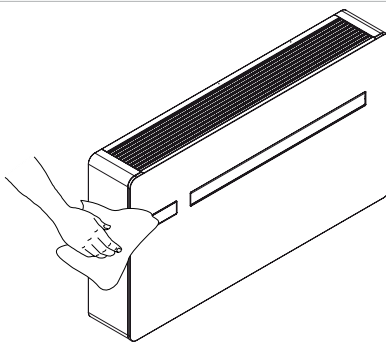

### Cleaning the filters

The air conditioner you have bought has been designed to keep maintenance operations to a minimum, in fact, they only include the following cleaning operations:


- Clean the air filter after a period of continuous use and according to the concentration of impurities in the air, or when you wish to start-up the appliance after a period of inactivity.  
The filter is located in the top part of the appliance.

To extract the filters:

- open the grid and remove it;
- extract the filters by lifting them;
- remove the dust from the filter with a vacuum cleaner or by washing it in running water without using detergents or solvents and leave to dry;
- put the filters back on top of the batteries, taking care to position them correctly;
- put the grid back.

- ⚠ After filter cleaning check if the panel is properly mounted.

- ⊘ It is forbidden to use the device without its mesh filter.

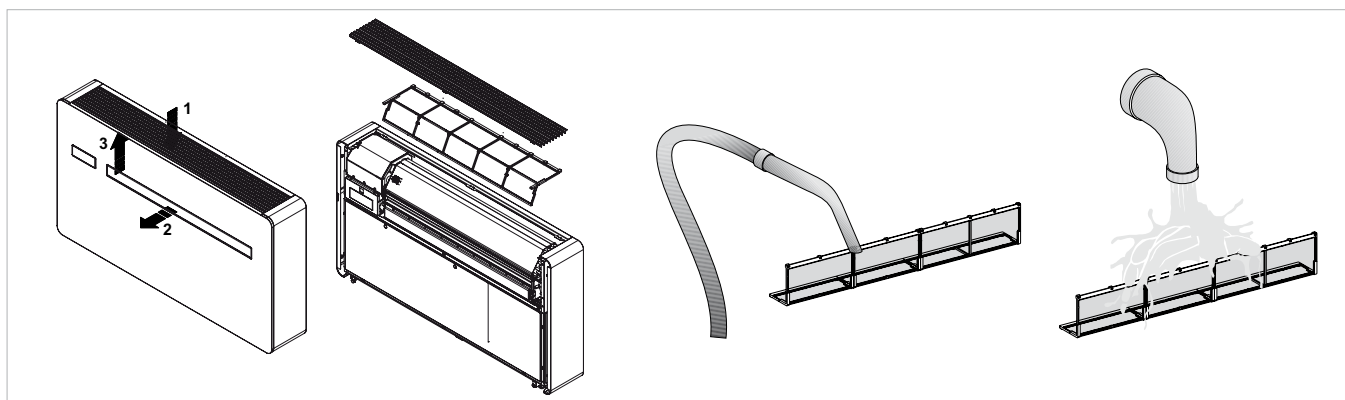

## INNOVAPP OPERATION

### InnovApp TwoPointZero



EN

#### 1.13 Minimum system requirements

The INNOVA TwoPointZero App lets you manage the main parameters of your air conditioner using a smartphone and tablet or with a specific desktop version conveniently from home or when you are out. Using our app is very simple. Just switch on the air conditioner display, set up the connection with your smartphone and begin managing the air conditioner directly from your device.

Follow the step by step guide all the way to the end.

To download and install the app, there are some operating system version requirements for your smartphone:

- for Android smartphones, the minimum version is 4.1.1
- for Apple smartphones, the operating system must be IOS 8.0 or higher.

#### 1.14 Downloading and configuring the APP

1. From your smartphone, connect to the Apple Store or Google Play.
2. Search for InnovApp TwoPointZero
3. Download the app onto your smartphone, following the installation wizard to install it.
4. Open the app

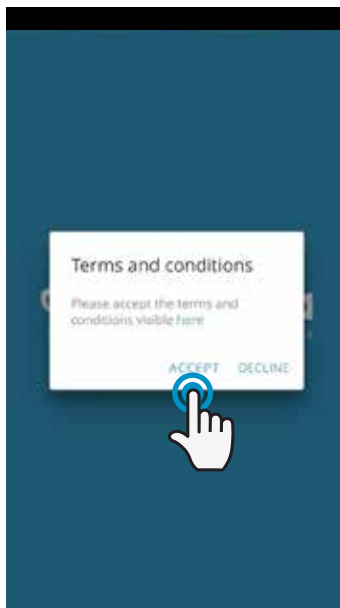


Figure 2-1

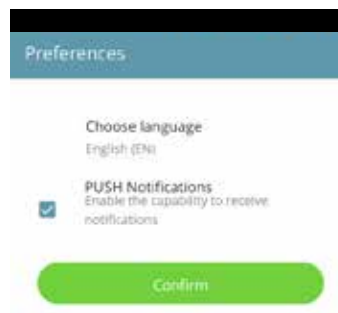


Figure 2-2



Figure 2-3

At the first launch, a pop-up appears for acceptance or refusal of the terms and conditions of use, which can be consulted by tapping on the word "here", therefore accessing the INNOVA website.

Tap "Let's get started" to begin using InnovApp TwoPointZero.

Select the language and the PUSH notification management method.

Tick the "PUSH notifications" preference to receive alarms connected to the air conditioner's operation on your smartphone even when the App is closed.

**Note:** These settings can also be changed later by selecting the "Preferences" menu item.

## 1.15 Air conditioner control via smartphone at home



Figure 2-4



Figure 2-5

After switching on the display of your air conditioner, go to your telephone's WiFi settings:

ensure that you have activated WiFi  
check the available WiFi connections  
find the Innova 2.0 network  
connect to it.

**Note:** with Android devices, this procedure is automatic. With iOS devices, you must enter the WiFi settings of your device and select the "Innova2.0" network.

**Note:** If there are several air conditioners to configure, switch on one at a time in order to prevent errors.

The product screen appears (Figure 2-6) where you can assign a name and indicate the unit's serial number, made up of 9 alphanumeric characters on the air conditioner's data plate (see section 1.11 on page 11).

A password can be set for the Innova 2.0 network in order to protect against management of your product by unauthorised users.



Figure 2-6



Figure 2-7

**Note:** For iOS devices, after entering the name of the product, the WiFi network name also changes automatically. You must therefore go back to your telephone's WiFi settings and connect to the renamed network "Innova2.0" followed by \_ and the name that you have just established, for example "Innova2.0\_MyInnova 2.0").

**Note:** The device name can also be changed later by accessing the menu item "2.0 and connected groups" and tapping on the second icon (pencil symbol). For iOS devices, once the name has been edited, you must return to your telephone's WiFi settings and connect to the WiFi network with the new name that has just been established.



Figure 2-8



Figure 2-9

Going back into the app, you can access the main menu through the icon in the top left corner.

When the "2.0 and Connected groups" item is selected, the air conditioners on the network are displayed and they can be edited or scheduled as desired.

New devices can be added, searching for, installing and configuring them tapping on the + symbol in the top right corner. This will open the screen as illustrated in Figure 2-18.

When one of the configured products is selected, the general air conditioner control screen appears, through which it can be controlled and managed.

**Note:** From this moment on, your smartphone becomes the remote control that you use to control the air conditioner over the local network, but not over the Internet.

In order to do this, you must complete another step: connect to your home WiFi, accessing your smartphone's settings and then select the "Remote Control" menu item.

EN

## 1.16 Management on desktop

You can also manage the air conditioner from your computer, configuring a specific desktop version of the App.

- Access the "Software" page of the INNOVA website: **www.innovaenergie.com > documents > software**

### MAC

- Download the zipped folder **"TwoPointZero InnovAPP desktop version - MAC"** and open it;
- double click on the file `run.sh` to open a command window:
  - type **cd**
  - drag the folder **"TwoPointZero InnovAPP desktop version - MAC"** into the command window (Figure 2-10) and press Enter
  - type **sh run.sh** and press Enter (Figure 2-11)
- The browser window will open with the first screen of the App for the desktop version. (Figure 2-12)
- You can begin with the configuration as explained in section 2.2 for the mobile version.

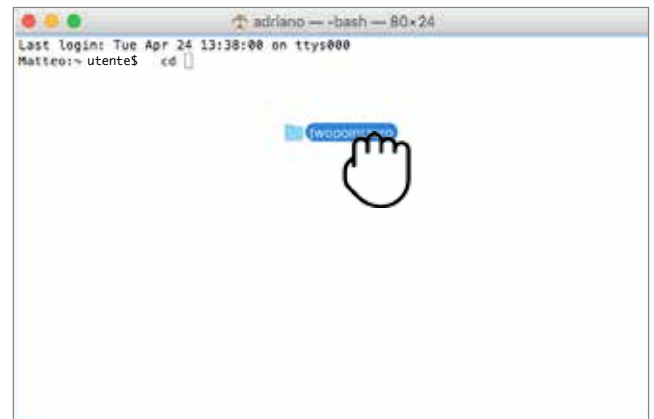


Figure 2-10



Figure 2-11

### WINDOWS

- Download the zipped folder **"TwoPointZero InnovAPP desktop version - WINDOWS"** and open it;
- double click on the file **run.bat** and the browser screen will open (Figure 2-12) and one of CMD.

### Note:

Exigences minimales:

- Chrome: 67
- Firefox: 60
- Opéra: 53
- Safari: non pris en charge
- IE: non supporté
- Edge: non pris en charge

(Safari, IE et Edge ne supportent pas la partie ou totalement RTCPeerConnection)



Figure 2-12

**Note:** As the first step of configuration, you will be asked to verify the connection to the air conditioner WiFi network. Therefore, go into the computer WiFi settings and select the corresponding network. If it was not already renamed during installation on smartphone, the WiFi will be called **Innova2.0**. After which, click **Done**.

**Note:** In order to make InnovApp TwoPointZero work on your desktop, you must have Java installed on the PC.

**Note:** See also paragraph "Control with several devices"

## 1.17 Remote control: manage your air conditioner even away from home

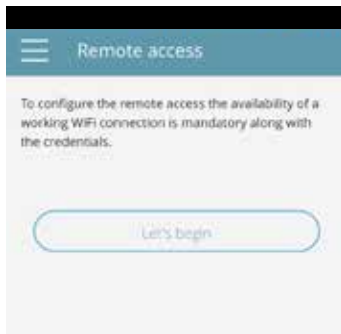


Figure 2-13

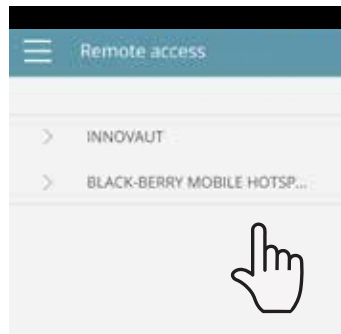


Figure 2-14

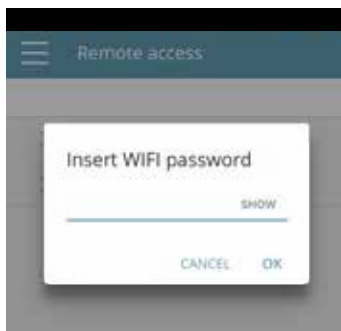


Figure 2-15

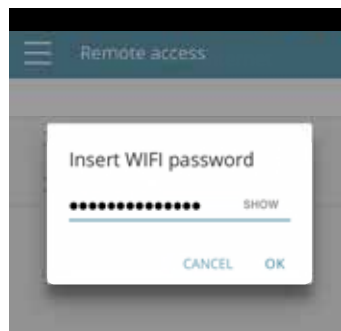


Figure 2-16

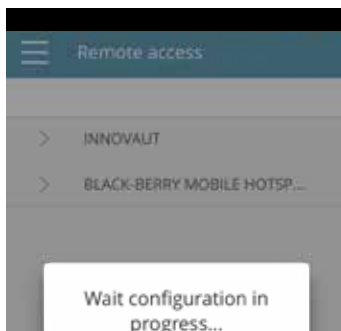


Figure 2-17

Once you have selected the menu item "Remote Control", a list of the available WiFi connections will appear.

**Note:** the air conditioner can connect only with 2.4GHz networks.

Select the preferred network for Internet access.

Then enter the WiFi network password and confirm it.

**Note:** the password can contain only alphanumeric characters from "A" to "Z" (uppercase and lowercase), from "0" to "9", "-", "\_", ".". Special characters are not permitted.

The App connects the air conditioner to the domestic network and the main screen to manage the appliance will appear again on the smartphone/tablet.

At this point, the smartphone/tablet is connected to the selected network.

From this moment, your 2.0 air conditioner is connected to a server over the Internet and can be managed from anywhere in the world over your telephone's WiFi or data connection.

**Note:** In the event that the procedure is not successful, the smartphone/tablet will automatically reconnect to the local network of the 2.0.

Therefore, repeat the procedure, rechecking the password entered and the name of the network.

**Note:** When the device is displayed in the cloud it may happen that the display of "Temp" is the name for the device.

In this specific case the device failed to restart, the communication works correctly but the name is incorrect. To solve, it is necessary to rewind the air conditioner (removing and returning power).

### Wifi network features

- working internet connection
- static public IPs are not required
- no incoming configurations are required on the ROUTER (NAT or other specific rules) - working dns service
- functioning DHCP service or alternatively the following information:
  - local ip address to be assigned to the subnet mask card
  - gateway
  - dns

- if the router or other entities in the customer's network have ACLs at the MAC-address level, the MAC-address of the card must be enabled if the client wants to control some features locally (noe change, advanced settings change, pc control) WIFI network must allow communication between devices connected to the same wifi (= Wifi Isolation must not be enabled)

Technical requirements for the proper functioning of the cloud connection TCP port 80, 443, 19009, 18321, 18009 output



## 1.18 Managing the air conditioner: App features

### GENERAL CONTROL SCREEN

of the air conditioner

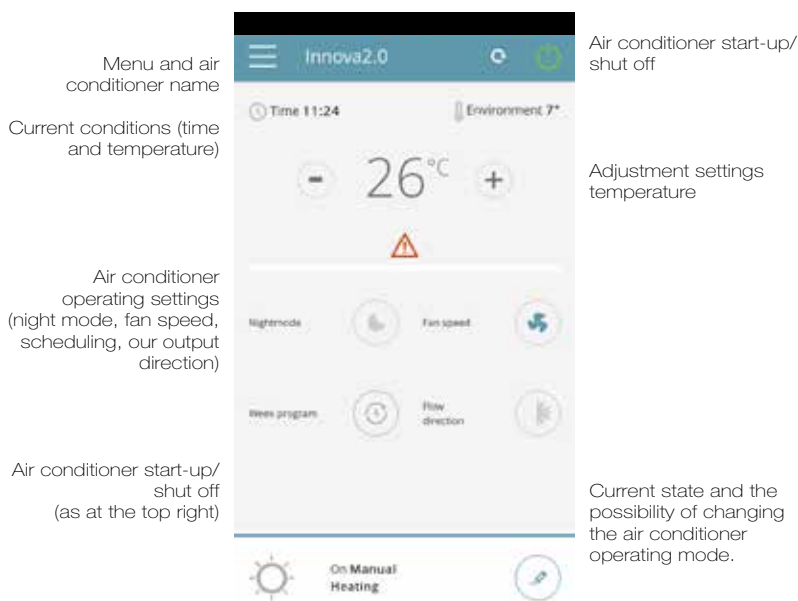


Figure 2-18

### MENU

menu items

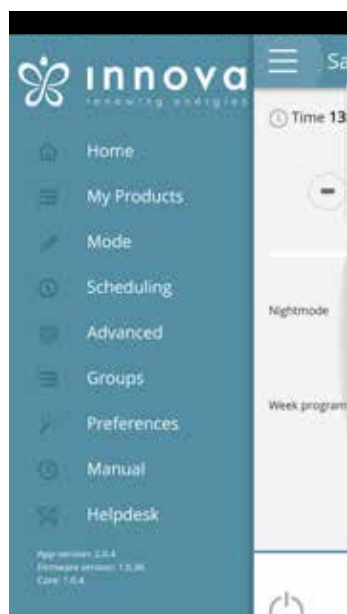


Figure 2-19

**HOME**  
general control screen  
(Figure 2-18)

**2.0 AND CONNECTED GROUPS**  
list of the air conditioners and groups of air conditioners configured in the App

**MODE**  
list of possible air conditioner management modes (manual, automatic, night, scheduled,...)

**SCHEDULING**  
section dedicated to the weekly scheduling of the air conditioner.  
**Note:** this is possible only if remote control has been configured.

**REMOTE CONTROL**  
visible only when the device is configured in standalone mode and used to move to the cloud.

**ADVANCED**  
visible only when the device is configured in cloud mode and allows DHCP / IP configuration of the network

**GROUPS**  
list of groups of several air conditioners (e.g. 1st floor, 2nd floor,...).

**PREFERENCES**  
language and PUSH notifications

**MANUAL**  
link to the INNOVA website where you can find the necessary documentation  
[www.innovaenergie.com/en/documents-products-airconditioners-innova/manuals/](http://www.innovaenergie.com/en/documents-products-airconditioners-innova/manuals/)

## MODE

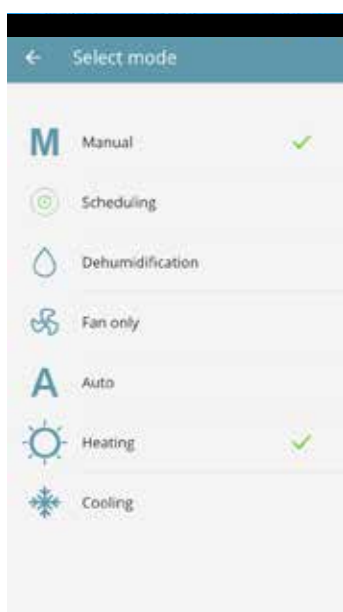


Figure 2-20

The air conditioner operating mode can be changed in several ways: clicking on the change button at the bottom right of the air conditioner general screen selecting "Mode" in the general menu clicking on the "Weekly schedule" icon on the device's main screen. This provides access to the screen illustrated in Figure 2-20.

## PREFERENCES

In the "Preferences" section which can be selected on the menu, the App language and the PUSH notification settings can be changed.

To receive notifications on the air conditioner's operation directly on your smartphone even when you are not using the App, tick the "PUSH Notifications" option.

## MANUAL

By selecting the "Manual" menu item, you will access the INNOVA website where you can consult the air conditioner's technical documentation.



View device details (if configured as standalone it will automatically connect to your network)



Change the device name (only if connected to the wifi network of the same)



Set your device as a favorite (the default device will be displayed when the app starts)



List of devices



Delete the device from the list of configured devices

## SCHEDULING

From the "Mode" menu item, you can decide to start the air conditioner manually or according to a schedule.

By selecting the "Scheduling" item, you access the air conditioner calendar scheduling feature (as illustrated in the figures below).

By clicking "edit" on a day of the week, you can add and define one or more start-up and shut-down periods for the air conditioner during that day, clicking on the "+" symbol.

**Note:** Schedule several start-up/shut-down periods with a minimum duration of half an hour on the same day.

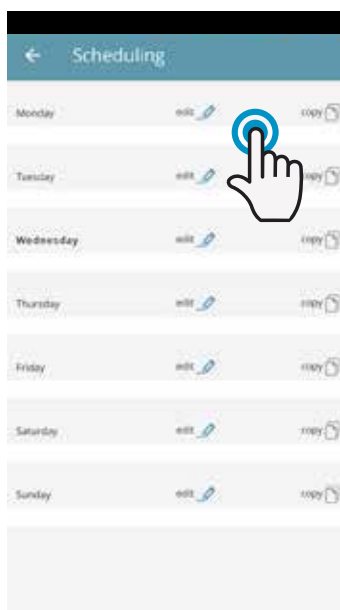


Figure 2-21



Figure 2-22

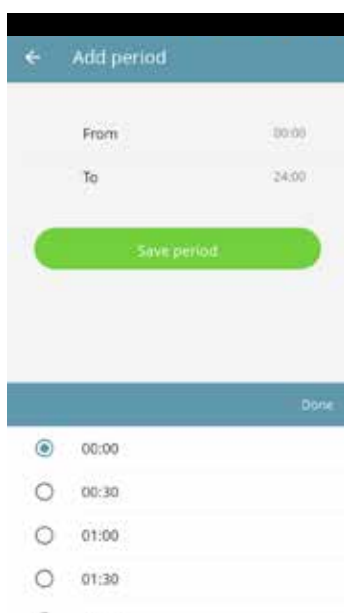


Figure 2-23

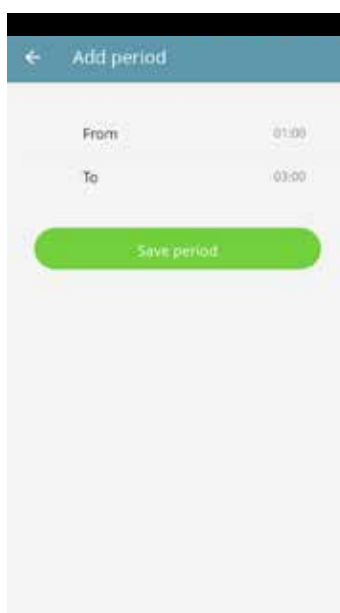


Figure 2-24

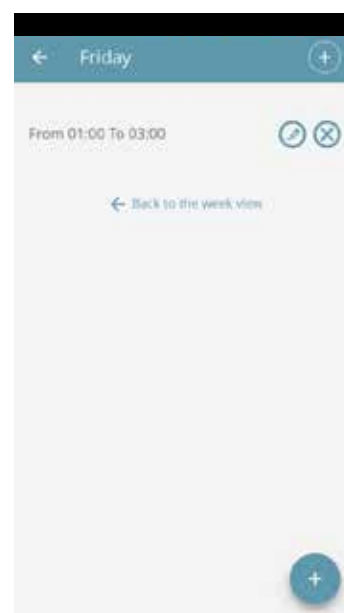


Figure 2-25

Once scheduling of a day has been confirmed, you will be returned to the screen with the list of the days of the week. (Figure 2-26)

If you want to apply the same schedule that you have just confirmed for other days, simply click "copy" and select the days where you want to apply this schedule (as illustrated in the sequence of example figures shown below).

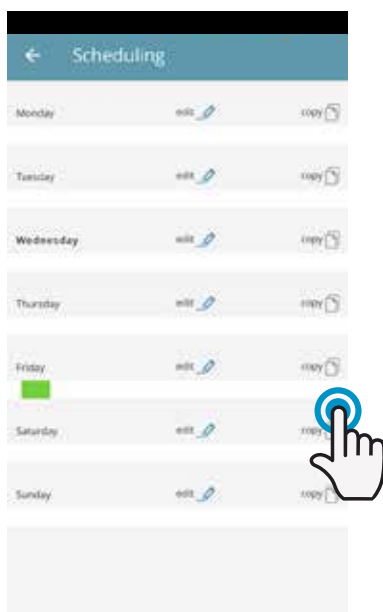


Figure 2-26



Figure 2-27



Figure 2-28



Figure 2-29



Figure 2-30

After completing scheduling, the operating mode screen will appear as illustrated in Figure 2-29.

Returning to the air conditioner's main screen (Figure 2-2830), on the lower part, there is the time of the first air conditioner restart should it be during a scheduled shut-down time.

To deactivate scheduling and return to manual mode:

- select "Mode" in the general menu and then "Manual".

- clicking on the edit icon at the bottom right of the air conditioner general screen.

**N.B.** Note: If the settings are changed on the air conditioner display, scheduling is disabled and manual mode is resumed.

If the air conditioner is in a place that is open to the public where it cannot be monitored, the display screen lock can be enabled in order to prevent unauthorised people from changing the settings.

Simply press and hold the Timer

symbol  on the air conditioner display for 10".

To go back to editing the air conditioner settings from the display, press the timer icon again for 10".

## GROUPS

If you have several air conditioners, you can combine them in groups to simplify scheduling and management of them. (For example, the air conditioners in a hotel could be grouped by floor).

First of all, select "Groups" in the menu and create a new group by clicking on "+".

Then give the group a "Title" and save using the icon at the top right.

The group has been created but it has still not been associated with any air conditioners. (This will be explained in the next section)

Returning to the "Groups" screen, the new group will appear and it can be edited or deleted using the adjacent icons.



Figure 2-31

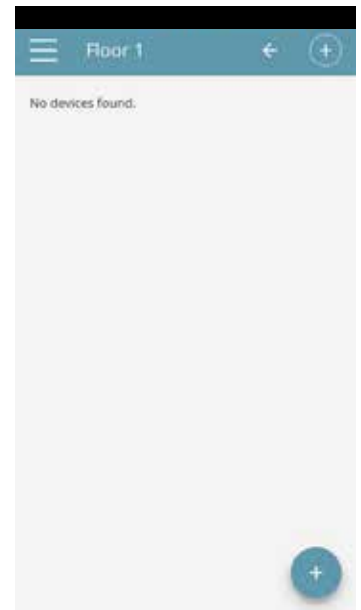


Figure 2-32

## CORRELATED GROUPS

The section contains the list of all the configured air conditioners and groups.

To add new air conditioners, click the "+" button at the top right of the screen and choose whether you want to search for air conditioners on the network or add them manually.



Figure 2-33

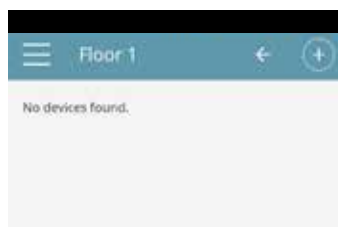


Figure 2-34

As for the groups, once the group is created in the "Groups" section as explained in the previous section, at this point, you can associate the various air conditioners to the group.

Click on the eye beside the group name and then on the "+" symbol and select the air conditioners to associate. Lastly, save using the icon at the top right.



Figure 2-35

You can also associate an air conditioner with the group through the air conditioner itself.

Select the penultimate icon on the row of the air conditioner (icon list with three rows) and click "Assign groups" (Figure 2-36). Assign the air conditioner to one of the groups shown on the list.

When, on the other hand, you click "Sent settings", the settings of that air conditioner are applied to the group that will be selected.

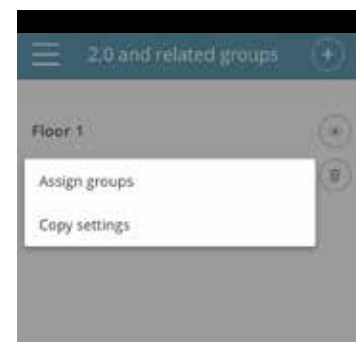


Figure 2-36

## CONTROL WITH SEVERAL DEVICES

The same air conditioner can be managed with several devices (smartphone/tablet/PC).

After configuration with the first device, the machine can be controlled with another smartphone/tablet following the procedure described below.

First of all, you must connect to the Wi-Fi network where the 2.0 you want to control is also connected.

Install the "InnovApp TwoPointZero" app on the new smartphone/tablet and proceed as illustrated in figures 2-1, 2-2 and 2-3 on page 13.

At this point, the telephone alerts that you are not connected to the right WiFi network and to connect to the

"Innova2.0": ignore the warning, clicking on the **"devices"** button right below the loading bar (Figure 2-37).

If you are connected to the WiFi network where your 2.0 is also connected, the telephone automatically scans all the "2.0" units connected to the network (Figure 2-38).

Once the device has been found, the general control screen opens automatically, from which you can control the air conditioner with the second telephone/tablet as well.

**Note:** If the search does not automatically find the air conditioner, press "+".



Figure 2-37

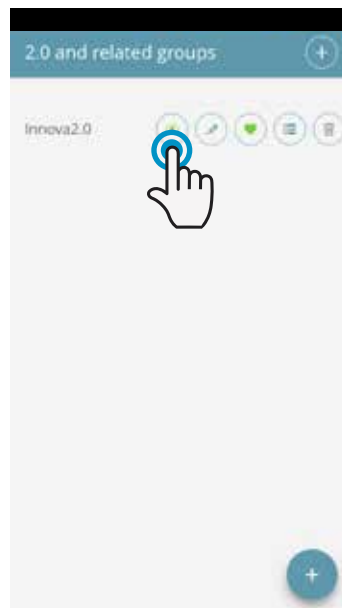



Figure 2-38




Figure 2-39

## ON, OFF and RESET OF THE WIFI NETWORK

With the "reset" function, you can resume the configuration from the start in a few simple steps:

- Press and hold in the button  on the air conditioner display for 10 seconds. When the word **"On"** appears on the display, release the button.
- If you do not touch anything for another 10", the 2.0 WiFi is active and remains visible and usable with the last configured name.
- To reset the air conditioner and return its WiFi network to the original configuration (named "Innova2.0"),

press the button  again. The abbreviation **"rSt"** will appear. Wait 10" so that the operation will complete successfully. At this point, new WiFi configuration of the 2.0 is required, starting from the indications in Figure 2-4.

- By holding the button in again, the 2.0 WiFi status switches to **"OFF"** mode: the WiFi transmitter will therefore be off and no longer visible from smartphone/tablet.

## 1.19 Troubleshooting

Effect	Causa	Solution
The air conditioner cannot be configured on the iOS smartphone	iOS smartphones do not automatically identify the WiFi network which was renamed during configuration of the App.	Go to the telephone's settings and select the 2.0 unit's WiFi network with the name assigned to it during configuration of the App.
Remote configuration is unsuccessful	The WiFi network may be weak.	Check the signal power
The air conditioner's WiFi cannot be found	The WiFi transmitter may be switched off OR the air conditioner may already be configured in "Remote control"	Ensure that there is power to the device
Several air conditioners in the house cannot be configured	During configuration, two or more air conditioners are on	Configure one air conditioner at a time: therefore, switch on one at a time, keeping all the others off, and start the configuration.
The air conditioner cannot be controlled through the App	The problem is connected to the version of the air conditioner.	The version that allows control of the air conditioner through the App is 1.0.36. Check your version by accessing the app menu: one of the menu items must be "firmware: 1.0.36". In the case of a previous version, contact INNOVA service.
During configuration of the remote control, the WiFi network does not work	The password contains special characters	Enter a new password using only the permitted alphanumeric characters: from "A" to "Z" (uppercase and lowercase), from "0" to "9", "-", "_", ".". Special characters are not permitted.
The air conditioner scheduling section cannot be accessed	Scheduling of the 2.0 is possible only after remote control has been configured.	Ensure that you have configured remote control, accessing the dedicated section from the App menu. Otherwise, configure it as explained on page 15.
Immediately after carrying out remote configuration, the name of the air conditioner is "TEMP"	This is a synchronisation problem between the air conditioner, the server and the smartphone.	Wait a few minutes. Otherwise, shut down and restart the air conditioner.
MQTT Server Problem	The server is in maintenance	Wait
Faults on the display: errors E7, E6 and other alarms		See page 10



INNOVA s.r.l.  
Via I Maggio 8 - 38089 STORO (TN) - ITALY  
tel. +39.0465.670104 fax +39.0465.674965  
[info@innovaenergie.com](mailto:info@innovaenergie.com)